



2016-2017 Toyota Tacoma

Prodigy P3 Brake Controller

Mounting Kit

Part# TACOP3

INSTALLATION INSTRUCTIONS


KIT CONTENTS

TACOMA P3 MOUNT PLATE

2 M4 SCREWS


STEP 1

REMOVE DRIVER SIDE DOOR SILL PANEL AND KICK PANEL

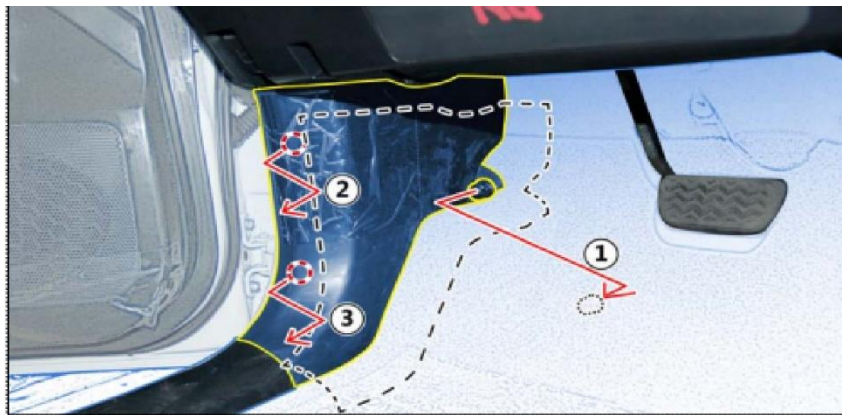


STEP 2

REMOVE THE LOWER DASH PANEL UNDER STEERING COLUMN BY REMOVING THE THREE 10 MM BOLTS AT THE BOTTOM OF THE PANEL.

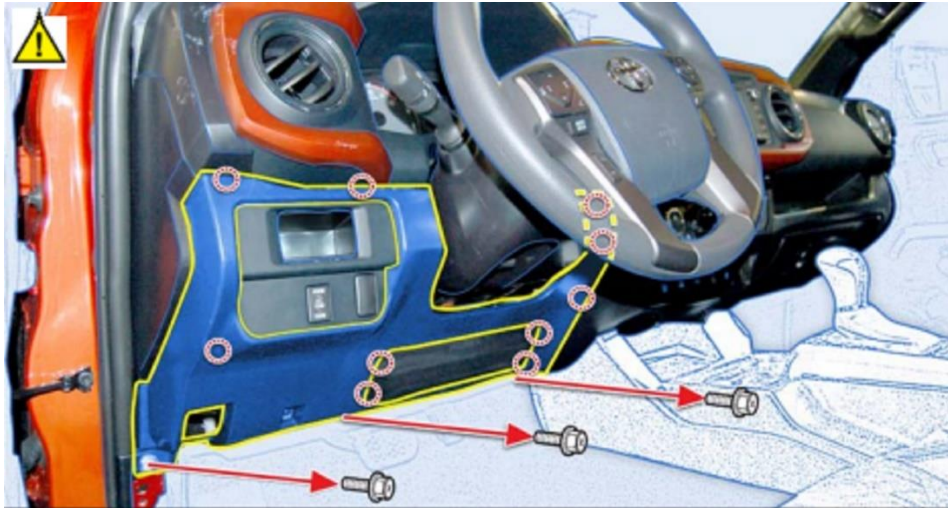

STEP 3

REMOVE SWITCH PANEL BY COMPRESSING TABS ON BACK OF PANEL

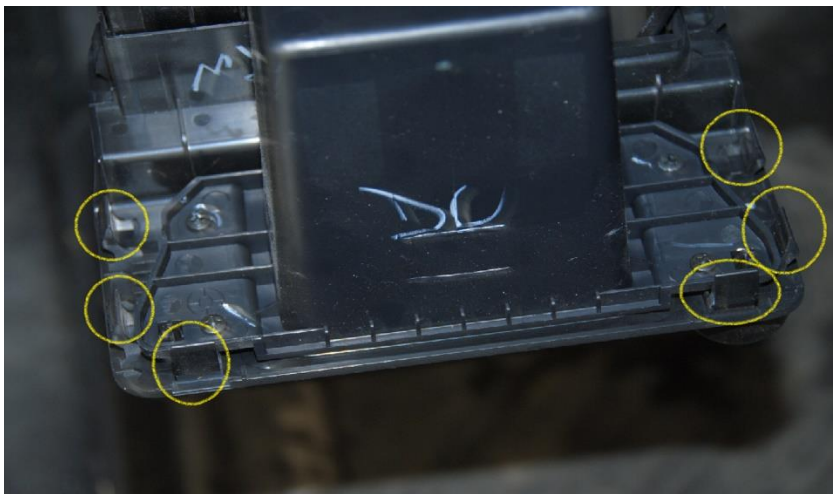


STEP 4

REMOVE 4 SCREWS FROM BACK OF SWITCH PANEL AND INSTALL P3 PANEL. REINSTALL 4 SCREWS INTO SWITCH PANEL.



STEP 5

INSTALL CONTROLLER THROUGH FRONT OF PANEL AND INSTALL 2 M4 SCREWS INTO SIDE OF CONTROLLER.

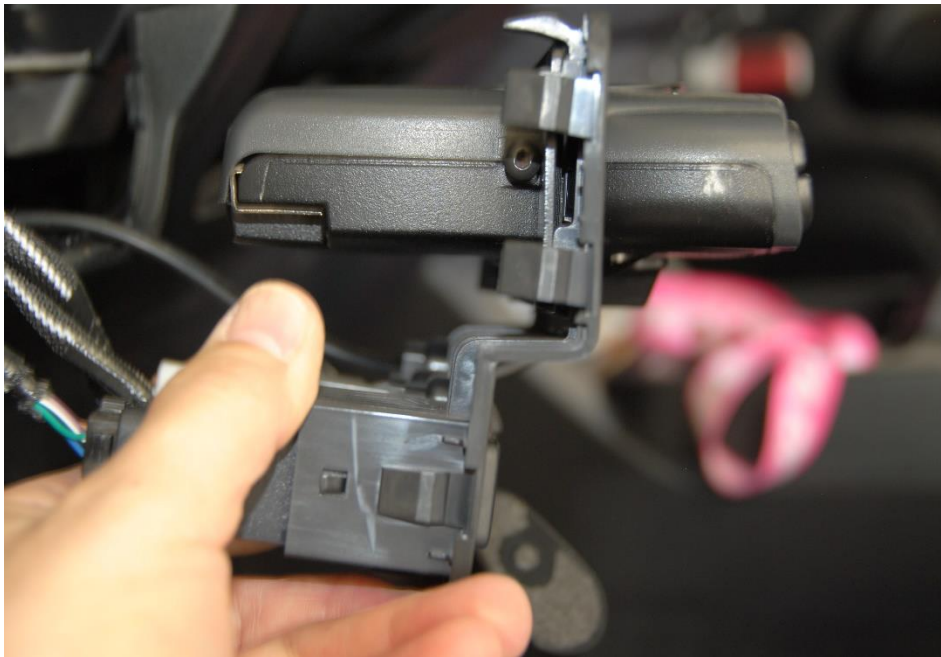

STEP 5

FIND 10 PIN TRAILER BRAKE CONNECTOR LOCATED BEHIND DRIVE SIDE KICK PANEL. SHOULD BE TAPED TOGETHER WITH ANOTHER HARNESS. WHEN USING TEKONSHA HARNESS PT#3017, MATCH THE PLUG FROM THE TEKONSHA HARNESS WITH THE FACTORY PLUG, AND CONNECT THE TWO PLUGS.

STEP 6

USING ZIP TIES, SECURE THE BRAKE CONTROLLER HARNESS SO IT IS NOT LOOSE.

STEP 7

REINSTALL SWITCH PANEL INTO LOWER DASH PANEL



STEP 8

PLUG IN BRAKE CONTROLLER HARNESS AND REINSTALL LOWER DASH PANEL.

STEP 9

REINSTALL DRIVER SIDE KICK PANEL AND SILL PLATE

NOW THAT THE INSTALLATION IS COMPLETE, REFER TO THE BRAKE CONTROLLER INSTRUCTION MANUAL FOR SET UP INSTRUCTIONS.

IF AT ANY TIME DURING THE INSTALLATION YOU SHOULD HAVE ANY QUESTIONS, FEEL FREE TO CALL EARL AT 951-858-3418.

THANK YOU FOR YOUR PURCHASE!

WE APPRECIATE YOUR BUSINESS